



# Power-Disconnect

ph: 415-826-8383

email: rental@holzmueller.com


## Distribution

12 - 20 Amp 240 Volt L6 Twist Lock/ Socapex



12- L6-20  
 2 - 6 Circuit Socapex Outlets - 240 V  
 2 - 20 Amp Duplex Outlets - 120 V  
 120/208 Volt AC 3Ø

30 Circuit- Pin-Socapex- L6-20-

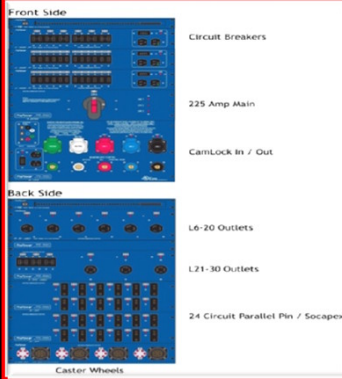

6- L6-20  
 24- Pin Socapex  
 Cam In / Out  
 225 Amp Main  
 Disconnect  
 L21-30

39 Circuit- Pin-Socapex- L6-20-L21-30

12 circuit - (12) edison w/ Socapex

12 circuit - (12) edison

8 circuit - (8) ed.- 1 phase

10 circuit - (4) Pin/(8) ED-1PH

18 circuit - (18) Pin

24 circuit - (24) Pin

24 circuit- 24pin/Socapex

12 circuit- Moving Light Distro 208V

40 circuit - (15) Pin - Flex

36 circuit - (4) 5 w T/L /(36) Pin

6 circuit - 1 PH or 3 PH TV Box

## Disconnect

30A Colorarc fuse

60A Cam fuse

100A Cam fuse

125A Cam fuse

150A Cam fuse split

200A Cam fuse

200A Cam breaker

225A Cam breaker

250A Cam breaker

email: rental@holzmueller.com

